

# Geodesic Domes

Tom Davis

tomrdavis@earthlink.net

<http://www.geometer.org/mathcircles>

September 15, 2004

## 1 What Is a Geodesic Dome?

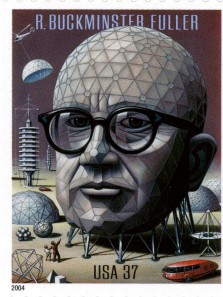
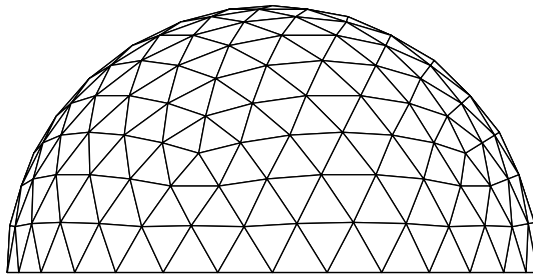


Figure 1: 6V Geodesic Dome and Buckminster Fuller Stamp

The geodesic dome was invented by R. Buckminster (Bucky) Fuller (1895-1983) in 1954. Fuller was an inventor, architect, engineer, designer, geometrician, cartographer and philosopher. In Figure 1 is illustrated a fairly complex version of a dome that's composed of small triangles that are approximately equal, and such that the vertices of the triangles all lie on the surface of a sphere. On the right of the figure is a recently-released postage stamp honoring Fuller.

In this article, we'll look at the mathematics that lies behind geodesic domes, but we'll also talk a little about why they make good engineering sense and how they might be constructed from real materials.

There are plenty of resources on the web on geodesic domes, but one that's particularly helpful, especially if you have any desire to build one of your own, is here: [www.desertdomes.com](http://www.desertdomes.com), which includes a dome calculator that does many of the calculations for you.

## 2 Engineering Considerations

A sphere is the mathematical object that contains the maximum volume compared to its surface area, so if a structure of large volume is to be constructed for minimum cost, it makes sense to look at structures whose shape approaches a sphere. But most construction materials come as flat or straight pieces, so forming the curves that would be necessary to make a perfect sphere might increase the expense considerably.

But structures like the one illustrated in Figure 1 closely approximate spheres, but are composed of straight struts or of flat triangles, depending on the construction method.

If the structure is composed of struts, there is another consideration; namely, that it should be composed completely of triangles. If it consists of any quadrilaterals or more complex polygons, they can flex if the

connections at the ends are not completely rigid. If the pieces, for example, are just connected with a bolt through a number of struts, it is almost impossible to make the joints rigid. But if the structure is completely composed of triangles, it can be made completely rigid, even if the individual joints are not.

One final engineering consideration is that if the triangles of which the structure is composed are all as close to equilateral triangles as possible, then the stresses will be approximately the same on all the struts, so there is very little wasted strength. Note that in the model at the beginning of this article, all of the triangles appear to be approximately equilateral.

Finally, in very large structures, it is a bad idea to have very long unsupported struts. The longer the struts, the easier they are to bend if shear forces are applied.

### 3 Perfect and Imperfect Solutions

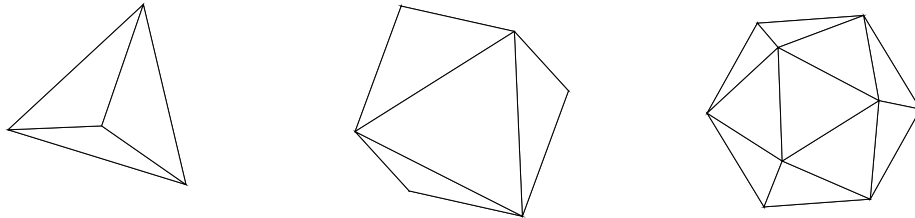


Figure 2: Platonic Solids

A perfect solution will be composed of triangles that are all equilateral, all the same size, and all making equal angles with each other. Unfortunately, this can only be achieved with three mathematical forms: the tetrahedron, the octahedron and the icosahedron. Figure 2 illustrates all three.

These so-called platonic solids are approximations to the sphere, but only the icosahedron is very close, and to make a large structure from it would require very long struts.

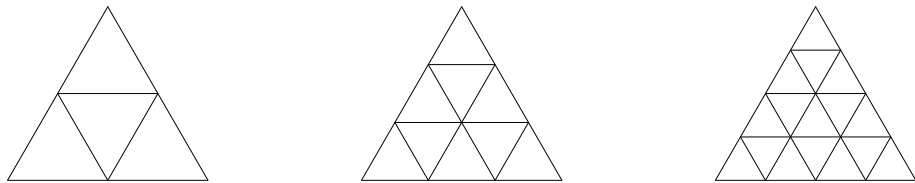


Figure 3: Uniform Triangle Subdivision

One way to proceed is simply to subdivide the triangles in one of the regular platonic solids, and this is how a geodesic dome is constructed. Any of the three solids could be used, but as we shall see, there are some serious problems if this is done beginning with a tetrahedron, and less-serious problems (but problems, nonetheless) if we begin with an octahedron.

We'll begin by describing the standard construction of domes of various complexity beginning with an icosahedron.

It is easy to subdivide an equilateral triangle into 4, 9, 16, or any perfect square number of sub-triangles, as is illustrated in Figure 3.

But if we simply subdivide the triangles of an icosahedron, although the vertices of the original icosahedron will lie on the surface of a sphere, the vertices that we need to add to subdivide the triangles will lie in the planes of those triangles and will be physically inside the sphere. This sort of subdivision will also tend to be a lot weaker structurally, since to maintain perfectly flat surfaces, the strengths of the joints would have to be infinite (see the “found” poetry from a physics text, below).

Hence no force, however great,  
 can stretch a cord, however fine,  
 into a horizontal line  
 which is accurately straight...

—William Whewell, *Elementary Treatise on Mechanics* (1819)

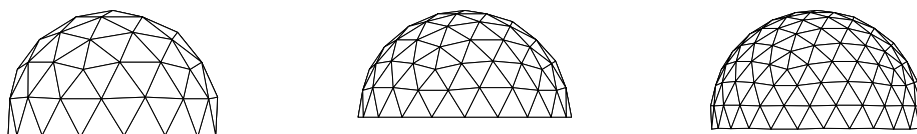


Figure 4: 3V, 4V and 5V Domes

Our solution will be simply to “push” those points out to the surface of the sphere from the center, but to do that we’ll need to be able to work with three-dimensional vectors and coordinate systems. First, we’ll look at some of the tools that are needed to work with three-dimensional vectors and then we’ll begin by looking closely at the icosahedron.



Figure 5: 3V and 5V Domes: Small Versions

The names, “3V”, “4V” and “5V” refer to the number of subdivisions that are made to the original triangles in the icosahedron before they are pushed out to the surface of the sphere. In Figure 1 you can also see a 6V dome. Notice that the domes of odd degree, the 3V and the 5V domes are slightly larger than a half sphere. That’s because when there are an odd number of triangles in the subdivision, there is no center line or “equator” at which to divide it, so we have to pick a version that is a little larger or a little smaller than a half sphere. In the examples in Figure 4, the larger versions were displayed. In Figure 5 appear the smaller versions of the 3V and 5V domes.

You may find it useful to see images of the original spheres from which all of the dome models above were cut. Those appear in Figure 6. It’s clear from these images that the 4V and 6V spheres have an equator and the others do not. If every vertex of the 3V sphere represents a carbon atom, then the sphere represents the molecule called “Buckminsterfullerine” which really exists, and has some very useful chemical and physical properties.

All the domes displayed in Figures 5 and 4 are fairly complicated to build; the easiest that can reasonably be called a geodesic dome is the 2V version. Figure 7 displays the 2V dome (a half-sphere) and the corresponding 2V sphere.

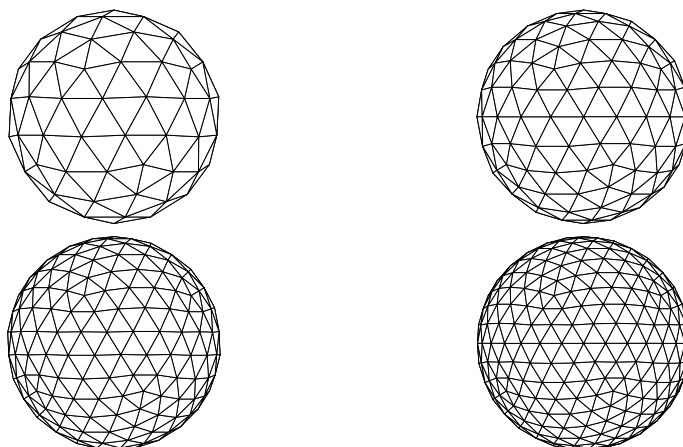


Figure 6: Dome Spheres: 3V, 4V, 5V and 6V



Figure 7: The 2V Dome and Sphere

It's obvious if you think about it, but if you look closely at the spheres in Figure 6, you can see that almost all the vertices on larger domes have six struts that meet at each. In every case, there are exactly 12 of the 5-strut vertices (on the entire sphere). This is, of course, the number of 5-strut vertices there are in the original icosahedron.

## 4 Vector Tools

We are going to do all of our work in a three-dimensional coordinate system. This is very similar to the two-dimensional systems that are introduced in every high-school algebra course with an  $x$  and a  $y$  axis, but we will add a third, the  $z$  axis, which is perpendicular to the other two. If we start at the origin of such a system, we can give directions to every point in space by giving three numbers: the distance to travel parallel to each of the axes (with negative distances meaning to move in the opposite direction).

One tool we will need is a method to find the distance between two points, but this can be obtained as a simple extension of the Pythagorean theorem. If the two points have coordinates  $P_0 = (x_0, y_0, z_0)$  and  $P_1 = (x_1, y_1, z_1)$ , then the distance  $D$  between them is given by the formula:

$$D(P_0, P_1) = \sqrt{(x_0 - x_1)^2 + (y_0 - y_1)^2 + (z_0 - z_1)^2}.$$

Of course if one of the points is the origin  $O$ , this reduces to:

$$D(O, P_0) = \sqrt{x_0^2 + y_0^2 + z_0^2}.$$

Notice also that if you have the coordinates that describe an object then you can uniformly scale the object by multiplying all the coordinates by a constant. So if you have the coordinates for a geodesic dome with diameter 1 foot and you want to build a dome with diameter 20 feet, you can just take all the coordinates for your 1 foot dome and multiply them by 20 to obtain coordinates for the new one. Similarly, all the strut lengths will be 20 times as long, et cetera.

For this reason, we will work in coordinates that are easy to use, and if we ever desire to build a real dome, all we need to do is find the appropriate factor once and multiply all of the numbers by that.

## 5 The Icosahedron

An icosahedron is a regular polyhedron with 20 sides, each of which is an equilateral triangle, and at each vertex, 5 triangles meet (see Figure 8). If you view an icosahedron with one vertex on top and another at the bottom, you can see that there are two rings of five vertices each, making a total of 12. There are 20 triangles, since 5 touch the top vertex, 5 touch the bottom and there are 10 in the band around the center.

It's also easy to count edges: there are 30. This is because if you cut the entire figure into triangles, each of the 20 triangles would have 3 edges making 60 (after cutting), but when assembled, every pair of adjacent triangles shares an edge so the uncut version would contain half that many, or 30.

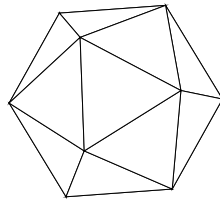


Figure 8: Icosahedron

Let  $\phi = (1 + \sqrt{5})/2 \approx 1.61803398875$  be the golden ratio. Then the following 12 points  $A, B, \dots, L$  are the three-dimensional coordinates of a regular icosahedron centered at the origin:

$$\begin{aligned} A &= (0, 1, \phi) & B &= (0, -1, \phi) & C &= (0, -1, -\phi) & D &= (0, 1, -\phi) \\ E &= (\phi, 0, 1) & F &= (-\phi, 0, 1) & G &= (-\phi, 0, -1) & H &= (\phi, 0, -1) \\ I &= (1, \phi, 0) & J &= (-1, \phi, 0) & K &= (-1, -\phi, 0) & L &= (1, -\phi, 0) \end{aligned}$$

Here are the 20 triangles connecting the vertices above that make up the surface of the icosahedron:

$$\begin{aligned} &AIJ & AJF & AFB & ABE & AEI \\ &BFK & BKL & BLE & CDH & CHL \\ &CLK & CKG & CGD & DGJ & DJI \\ &DIH & ELH & EHI & FJG & FGK \end{aligned}$$

Finally, here are the 30 edges of those triangles:

*AB AE AF AI AJ BE BF BK BL CD*  
*CG CH CK CL DG DH DI DJ EH EI*  
*EL FG FJ FK GJ GK HI HL IJ KL*

It is a bit tedious to check, but the length of all 30 of the segments in the list above is 2. For example, the length of *AB* is given by:

$$|AB| = \sqrt{(0 - 0)^2 + (1 - (-1))^2 + (\phi - \phi)^2} = \sqrt{4} = 2.$$

Another typical calculation yields the length of the segment *AE*:

$$\begin{aligned}
 |AE| &= \sqrt{(0 - \phi)^2 + (1 - 0)^2 + (\phi - 1)^2} \\
 &= \sqrt{\frac{1 + 2\sqrt{5} + 5}{4} + 1 + \frac{1 - 2\sqrt{5} + 5}{4}} \\
 &= \sqrt{12/4 + 1} = \sqrt{4} = 2.
 \end{aligned}$$

Notice that all the vertices of our icosahedron lie on the surface of a sphere centered at the origin. That's obvious because in every case, the coordinates, in some order, have a 0, a 1 and a  $\phi$ , the last two possibly preceded by a negative sign. But to calculate the distance from the origin to that point, we just square all three numbers (which will eliminate any influence from any negative numbers) add the three together (yielding the same sum in every case) and take the square root of the result.

For the particular coordinates that we've chosen, the radius of the sphere in which the icosahedron is inscribed turns out to be about 1.90211303 units. This isn't a particularly nice number, but it's worth it to have particularly nice and relatively uniform coordinates for all the vertices.

## 6 Strut Lengths

If we consider the 2V dome, each of the equivalent equilateral triangles from the icosahedron is subdivided into 4 triangles and then the inner three vertices are pushed out to the surface of the inscribing sphere. Each of the original sides of each triangle will become two equal pieces on the surface of the 2V dome, and three additional pieces are added to form the inner triangle. The three struts that make up the inner triangle are of equal length, as are the six struts that were made by subdivision and pushing out of the original edges of the icosahedron. It's easy to verify by calculation that the two lengths are different, but that all of the struts in the final dome or sphere are one of those two lengths.

A similar, but slightly more complex analysis shows us that in the 3V dome, exactly three different strut lengths are required.

Thus if you're making a 2V dome, there are only two different strut lengths required—for the dome, not the sphere, exactly 30 of the shorter length and 35 of the longer length are required. Since the dome can be arbitrarily scaled, it's possible to find the optimal lengths for the two struts, given that you can purchase the raw material in fixed lengths.

A standard construction material for domes is steel electrical conduit that comes in 10-foot lengths in the United States. If you'd like to purchase the minimum number of these and yet make a dome of maximal size, you simply need to cut each length into two pieces that are in the proper ratio. With 35 10-foot pieces, you can make the 35 long and 30 short struts and have 5 extra short struts at the end. (It's probably a good idea to get a few more than 35, in case there's a manufacturing error, and so that you will have at least a couple of spares

of the longer length.) If holes are drilled in the ends of the struts, the problem of optimization is only a tiny bit more complicated.

So let's see how to calculate the strut lengths, beginning with the 2V dome. We'll consider the original triangle  $AIJ$  of the icosahedron listed in the previous section. The approximate coordinates of  $A$ ,  $I$  and  $J$  are  $(0, 1, 1.618)$ ,  $(1, 1.618, 0)$  and  $(-1, 1.618, 0)$ , respectively.

There are many ways to proceed, but one approach is this. We noted earlier that the radius of the sphere in which the icosahedron is centered is  $\sqrt{(1 + \phi^2)} = 1.902$ . Thus if we divide all the coordinates by 1.902 we will have all the vertices on the surface of a sphere of radius 1. Using the same names for the vertices, this will give us the following sets of coordinates:  $A = (0, .5257, .8507)$ ,  $I = (.5257, .8507, 0)$  and  $J = (-.5257, .8507, 0)$ .

The lengths of segments  $AI$ ,  $IJ$  and  $JA$  are all equal to:

$$\sqrt{(.5257^2 + (.8507 - .5257)^2 + .8507^2)} \approx 1.0515.$$

To find the midpoint of segment  $AI$ , we simply need to find the average coordinates of vertices  $A$  and  $I$ :  $(.5257/2, (.5257 + .8507)/2, .8507/2) = (.2628, .6882, .4254)$ . A similar computation gives the midpoint of  $I$  and  $J$  as  $(0, .8507, 0)$ . Both of these vectors have the same length, namely .8507, so to push them to the surface of the sphere, we need to divide all the coordinates by .8507, yielding  $M = (.3089, .8090, .5)$  and  $N = (0, 1, 0)$ , respectively, where  $M$  and  $N$  are the locations of the midpoints of the segments after they have been pushed out to the surface of the sphere.

The two strut lengths required to make a dome or sphere of radius 1 are thus equal to the lengths of  $AM$  and  $MN$ , which we calculate to be:  $|AM| = .5465$  and  $|MN| = .6180$ .

Suppose we wish to construct an optimal 2V dome, using 10-foot pieces of electrical conduit, where we plan to flatten the ends and to drill holes one inch in from each end to attach the struts together. Basically, there are 4 "wasted" inches because we will need four holes after cutting the struts. Thus the original piece of conduit is effectively only 9 feet 8 inches, or 9.6666 inches long. This has to be divided in a ratio of  $|AM|/|MN|$ , so the pieces will have lengths 4.536 feet and 5.130 feet.

Similar calculations can be made for any dome. With the kind permission of Tara Landry who constructed and maintains [www.desertdomes.com](http://www.desertdomes.com), we include the strut length information for subdivisions for 1V through 6V domes. Figure 9 shows the different lengths required for each triangular subdivision, and the associated tables display the ratios of the various lengths, assuming you want to build a dome with radius 1.0. In Figure 9, the struts are only labeled in the horizontal direction. The labels can be rotated to obtain the lengths in the two other directions.

In addition, the number of struts of each of the lengths are shown to make a dome (or, in the case of an odd-V dome, both the smaller and the larger version) or a sphere. For example, if you want to make the larger 5V dome of radius 1.0, you will need 30 of the "A" struts having length 0.198147430801, 60 of the "B" struts, et cetera.

Strut	Length	D1	D2	Sphere
A	1.05146222424	10	25	30

Strut	Length	D1	D2	Sphere
A	0.348615488820	30	30	60
B	0.403548212335	40	55	90
C	0.412411489310	50	80	120

Strut	Length	Dome	Sphere
A	0.546533057825	30	60
B	0.618033988750	35	60

Strut	Length	Dome	Sphere
A	0.253184595784	30	60
B	0.294530833739	60	120
C	0.295241808844	30	60
D	0.298588133655	30	60
E	0.312868930080	70	120
F	0.324919696233	30	60

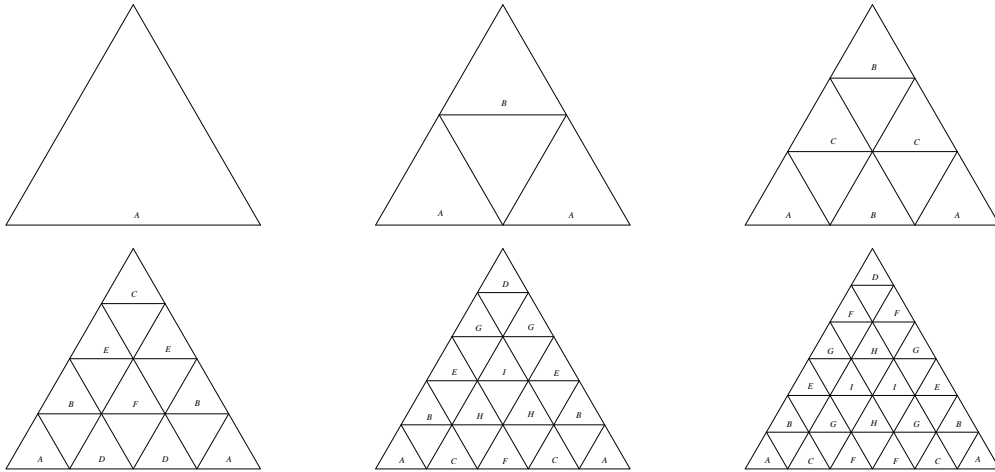


Figure 9: Strut Subdivision Lengths

Strut	Length	D1	D2	Sphere
A	0.198147430801	30	30	60
B	0.225685786566	60	60	120
C	0.231597595641	30	30	60
D	0.231790251268	30	30	60
E	0.245085783201	50	80	120
F	0.245346420565	10	20	30
G	0.247242909849	60	70	120
H	0.255167012309	50	70	120
I	0.261598097465	30	35	60

Strut	Length	Dome	Sphere
A	0.162567228883	30	60
B	0.181908254598	60	120
C	0.187383400570	30	60
D	0.190476861168	30	60
E	0.198012574234	60	120
F	0.202819695856	90	180
G	0.205907734855	130	240
H	0.215353730111	65	120
I	0.216628214422	60	120

If the dome is an even-V form based on the icosahedron, the midpoints of the original triangles on the “equator” all lie exactly on the equator, so any subdivisions of those equatorial lines will also lie in the plane of the equator. When those points are pushed out to the surface, they will lie on a mathematically perfect plane, and a dome so constructed will lie perfectly on perfectly flat ground.

For odd-V domes of degree 3 or greater, there are no point on the equator, so we have to decide whether to go up a “half rank” or down a “half rank” from the true equator to make our dome. In either case, the points up one rank are *not* in a perfect plane, but they are close enough that it often doesn’t matter. As the odd degree gets larger and larger, the error becomes less and less.

## 7 How Many Struts Are Required?

Let’s consider first the problem of determining the number of struts required to make a sphere for each different size.

The initial icosahedron is made up of 20 triangular faces and 30 edges. When a single one of the triangles is subdivided into 1, 4, 9, 16, . . . smaller triangles, the number of internal edges can be seen to be from the figures: 0, 3, 9, 18, 30, 45. This seems to satisfy the formula  $3(n^2 - n)/2$ , where  $n$  is the number of subdivisions of each side. The number of edge struts will obviously be  $3n$ .

We can see that the formulas above are true, since if we were to cut up the original triangle into  $n^2$  smaller



triangles, there would be  $3n^2$  edges, but each is double-counted except for the  $3n$  outer edges. This makes a total of  $(3n^2 - 3n)/2$  inner edges, matching the formula we obtained from a direct count of the 6 smallest examples.

For the sphere, there are 20 faces and 30 edges of the original icosahedron. Each face will generate  $3(n^2 - n)/2$  internal struts and each of the 30 edges will add  $30n$  more struts, for a total of  $30n^2$  struts, and this agrees with the values in the tables.

For the even- $V$  domes, we can't quite cut this number in half, since there is the line of struts that lie along the ground. If we cut the number in half, we will only include half of the struts lying along the ground, so we need to adjust for that.

If  $n$  is even, then an  $n$ - $V$  dome will have  $5n$  struts on the ground. Thus the total number of struts required for an  $n$ - $V$  dome, where  $n$  is even, is given by the formula:  $30n^2/2 + 5n/2$ . This formula is in agreement with the values in our tables for 2V, 4V and 6V domes.

For the odd- $V$  domes the calculation is not too hard. We make an upper (smaller) odd- $V$  dome by slicing an odd- $V$  sphere in half, but not on a rank.

In fact the cut will slice  $10n$  struts, so the total number of struts in the smaller odd- $V$  dome is given by  $(30n^2 - 10n)/2$  which again agrees with the values in the tables.

Finally, for the larger odd- $V$  dome, we need to add to that value the struts we sliced:  $10n$  of them, plus the new bottom struts:  $5n$  of them, for a total of  $15n^2 + 10n$ .

## 8 Open Problem

If you build an icosahedron-based dome, how many different strut lengths will be required?

This seems to be a difficult question, and I have not been able to find a nice solution. Using a computer program, I was able to work out the following data for the first few subdivision sizes:

1V	2V	3V	4V	5V	6V	7V	8V	9V	10V
1	2	3	6	9	9	16	20	18	30
11V	12V	13V	14V	15V	16V	17V	18V	19V	20V
36	30	49	56	45	72	81	63	100	110

I cannot find any reference to this sequence, and have submitted it to the online "Encyclopedia of Integer Sequences" at:

<http://www.research.att.com/~njas/sequences/>

## 9 Tetrahedron and Octahedron-Based Domes

There is no reason that you cannot begin with a tetrahedron or octahedron, subdivide the triangles and push the vertices out to the inscribing sphere, and make successively better approximations to a sphere.

With a tetrahedron, a major problem will arise if you wish to have a dome rather than a complete sphere, since the tetrahedron has no natural "equator" as does the icosahedron when its triangles are divided into an even number of sub-triangles or as does the octahedron with any type of triangle subdivision.

In a sense, then the octahedron might seem to be a better candidate for geodesic domes than the icosahedron,

since the 1V, 2V, 3V, ... domes based upon it will all have a flat base. The problem arises from the fact that more subdivisions are required, and thus more different lengths are required. For the icosahedron-based domes, the 1V, 2V and 3V domes require 1, 2 and 3 different strut lengths, respectively. It's nice to have lots of struts of the same length, since then it's easy to have a small number of spares, in case there is damage, and the manufacturing process would require a smaller number of jigs.

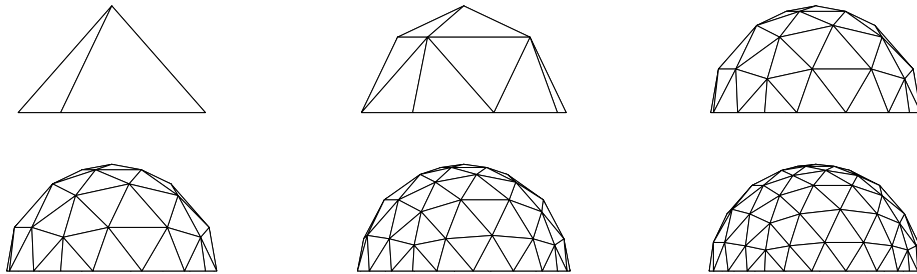


Figure 10: 1V through 6V Octahedral Domes

Finally, although you almost never see them in the real world, Figure 10 shows what 1V through 6V octahedral domes would look like.



Figure 11: 4V Dome at Burning Man 2004

The final illustration in Figure 11 is the geodesic dome under "the man" at Burning Man 2004. It was burned, along with the man, on September 4, 2004.